

SONY®

3-085-050-12(1)

CD/DVD Player

Operating Instructions



DVP-NS425P

© 2003 Sony Corporation

WARNING


To prevent fire or shock hazard, do not expose the unit to rain or moisture. To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The AC power cord must be changed only at a qualified service shop.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

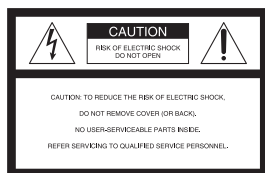

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage”

within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and

maintenance (servicing) instructions in the literature accompanying the appliance.

For customers in the U.S.A Owner’s Record

The model and serial numbers are located at the rear of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. DVP-NS425P

Serial No. _____

CAUTION

You are cautioned that any change or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Welcome!

Thank you for purchasing this Sony CD/DVD Player. Before operating this player, please read this manual thoroughly and retain it for future reference.

Precautions

On safety

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.

On power sources

- The player is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord, grasp the plug itself; never pull the cord.
- Should the AC power cord need to be changed, have it done at a qualified service shop only.

On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug that might block the ventilation holes.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Do not install the player in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the player away from equipment with strong magnets, such as microwave ovens, or large loudspeakers.
- Do not place heavy objects on the player.

On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- When you move the player, take out any discs. If you don't, the disc may be damaged.

On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played.

On cleaning

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

On cleaning discs

Do not use a commercially available cleaning disc. It may cause a malfunction.

IMPORTANT NOTICE

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Plasma display panel televisions and projection televisions are susceptible to this.

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

Table of Contents

WARNING	2
Welcome!	2
Precautions	3
About this Manual	6
This Player Can Play the Following Discs	6
Notes about the Discs	7
Index to Parts and Controls	8
Guide to the Control Menu Display	12
<hr/>	
Hookups	14
Hooking Up the Player	14
Step 1: Unpacking	14
Step 2: Inserting Batteries into the Remote	14
Step 3: Connecting the Video Cords	15
Step 4: Connecting the Audio Cords	18
Step 5: Connecting the Power Cord	23
Step 6: Quick Setup	23
<hr/>	
Playing Discs	25
Playing Discs	25
Resuming Playback from the Point Where You Stopped the Disc (Multi-disc Resume)	27
Using the DVD's Menu	28
Playing VIDEO CDs with PBC Functions (PBC Playback)	28
Playing an MP3 Audio Track	29
Various Play Mode Functions (Program Play, Shuffle Play, Repeat Play, A-B Repeat Play)	31
<hr/>	
Searching for a Scene	36
Searching for a Particular Point on a Disc (Search, Scan, Slow-motion Play, Freeze Frame)	36
Searching for a Title/Chapter/Track/Scene, etc.	37
Searching by Scene (PICTURE NAVIGATION)	39
<hr/>	
Viewing Information About the Disc	40
Checking the Playing Time and Remaining Time	40
<hr/>	
Sound Adjustments	43
Changing the Sound	43
Surround Mode Settings	44
<hr/>	
Enjoying Movies	46
Changing the Angles	46
Displaying the Subtitles	46
Adjusting the Playback Picture (CUSTOM PICTURE MODE)	47
Sharpening the Outline of Image (SHARPNESS)	48





Using Various Additional Functions	49
Locking Discs (PARENTAL CONTROL)	49
Controlling Your TV with the Supplied Remote	52

Settings and Adjustments	53
Using the Setup Display.	53
Setting the Display or Sound Track Language (LANGUAGE SETUP)	54
Settings for the Display (SCREEN SETUP).	55
Custom Settings (CUSTOM SETUP).	56
Settings for the Sound (AUDIO SETUP)	57

Additional Information	59
Troubleshooting	59
Self-diagnosis Function (When letters/numbers appear in the display).	61
Glossary.	62
Specifications	64
Language Code List	65
Index	66




About this Manual

- Instructions in this manual describe the controls on the remote. You can also use the controls on the player if they have the same or similar names as those on the remote.
- The meaning of the icons used in this manual is described below:

Icon	Meaning
	Functions available for DVD VIDEOS and DVD-RWs/ DVD-Rs in video mode or DVD+RWs/DVD+Rs
	Functions available for VIDEO CDs, Super VCDs, or CD-Rs/ CD-RWs in video CD format or Super VCD format
	Functions available for DATA CDs (CD-ROMs/CD-Rs/CD-RWs containing MP3* audio tracks)
	Functions available for music CDs or CD-Rs/CD-RWs in music CD format

* MP3 (MPEG 1 Audio Layer 3) is a standard format defined by ISO (International Standard Organization) /MPEG which compresses audio data.

This Player Can Play the Following Discs

Format of discs	
DVD VIDEO (page 62)	
VIDEO CD	
Music CD	

The “DVD VIDEO” logo is a trademark.

Region code

Your player has a region code printed on the back of the unit and only will play DVD VIDEO discs (playback only) labeled with

identical region codes. This system is used to protect copyrights.

DVDs labeled  will also play on this player.

If you try to play any other DVD, the message “Playback prohibited by area limitations.” will appear on the TV screen. Depending on the DVD, no region code indication may be labeled even though playing the DVD is prohibited by area restrictions.



Example of discs that the player cannot play

The player cannot play the following discs:

- All CD-ROMs (including PHOTO CDs)/ CD-Rs/CD-RWs other than those recorded in the following formats:
 - music CD format
 - video CD format
 - MP3 format that conforms to ISO9660* Level 1/Level 2, or its extended format, Joliet
- Data part of CD-Extras
- DVD-RWs in VR mode
- DVD-ROMs
- DVD Audio discs
- HD layer on Super Audio CDs
- * A logical format of files and folders on CD-ROMs, defined by ISO (International Standard Organization).

Also, the player cannot play the following discs:

- A DVD with a different region code.
- A disc recorded in a color system other than NTSC, such as PAL or SECAM (this player conforms to the NTSC color system).
- A disc that has a non-standard shape (e.g., card, heart).
- A disc with paper or stickers on it.
- A disc that has the adhesive of cellophane tape or a sticker still left on it.

Notes

- **Notes about DVD-RWs/DVD-Rs, DVD+RWs/DVD+Rs or CD-Rs/CD-RWs**

Some DVD-RWs/DVD-Rs, DVD+RWs/DVD+Rs, or CD-Rs/CD-RWs cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software.

The disc will not play if it has not been correctly finalized or if it was created in the Packet Write format. For more information, see the operating instructions for the recording device. Note that some playback functions may not work with some DVD+RWs/DVD+Rs, even if they have been correctly finalized. In this case, view the disc by normal playback.

- **Music discs encoded with copyright protection technologies**

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VIDEO CDs.

Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Notes about the Discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.
- Clean the disc with a cleaning cloth. Wipe the disc from the center out.




- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

Index to Parts and Controls

For more information, refer to the pages indicated in parentheses.

Front panel

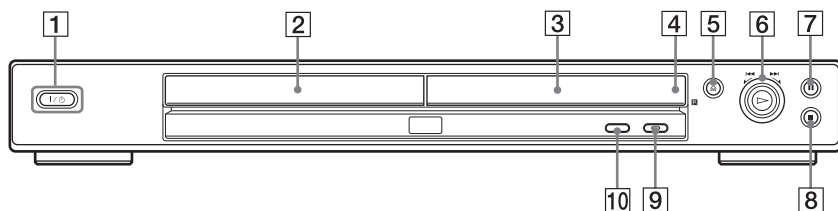


- 1** I/⏻ (on/standby) button (25)
- 2** Disc tray (25)
- 3** Front panel display (9)
- 4** (remote sensor) (14)
- 5** (open/close) button (25)
- 6** /Playback Dial (25, 36)
- 7** (pause) button (26)
- 8** (stop) button (26)

- 9** PROGRESSIVE button*/indicator (17)
Lights up when the player outputs progressive signals.
- 10** SURROUND button (44)


* Only press the PROGRESSIVE button if you have connected a progressive signal compatible TV to the COMPONENT VIDEO OUT jacks using a component video cord (page 17).

Front panel display


When playing back a DVD

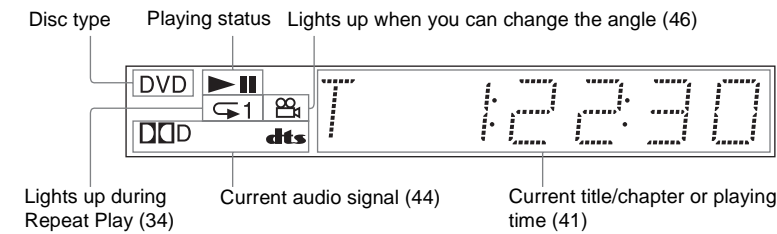


When playing back a VIDEO CD with Playback Control (PBC) (28)

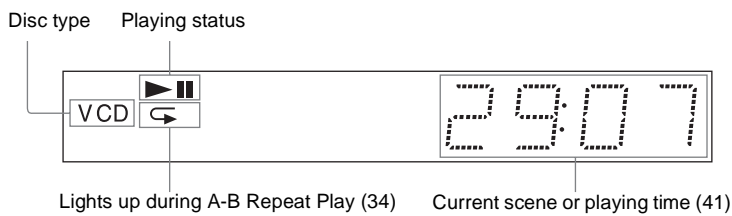

When playing back a CD, DATA CD (MP3 audio), or VIDEO CD (without PBC)

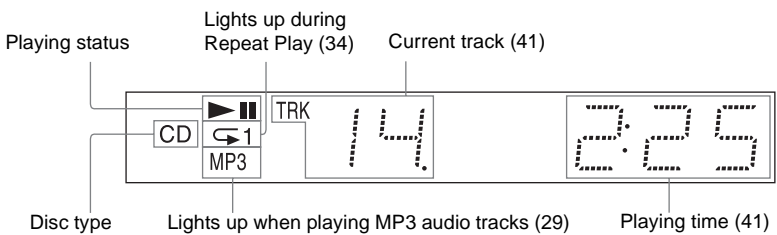

Rear panel

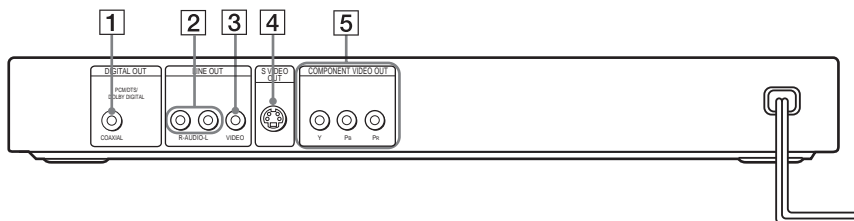


- 1** DIGITAL OUT (COAXIAL) jack (20, 21, 22)
- 2** LINE OUT L/R (AUDIO) jack (19, 20, 21)

- 3** LINE OUT (VIDEO) jack* (15)
- 4** S VIDEO OUT jack* (15)
- 5** COMPONENT VIDEO OUT** jacks (15)

* Do not press the PROGRESSIVE button on the front panel if you have connected the TV to these jacks (page 17).

** Only press the PROGRESSIVE button on the front panel if you have connected a progressive signal compatible TV to the player (page 17).

Remote

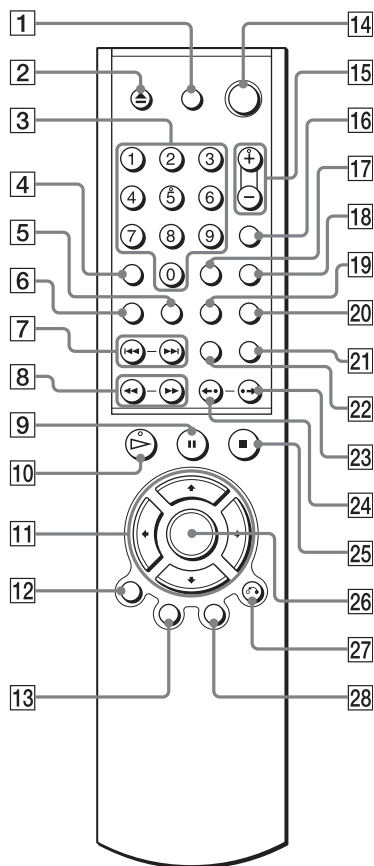

- 1 TV (on/standby) button (52)
- 2 OPEN/CLOSE button (25)
- 3 Number buttons (28)
The number 5 button has a tactile dot.*
- 4 CLEAR button (31)
- 5 SUBTITLE button (46)
- 6 AUDIO button (44)
- 7 PREV/NEXT (previous/next) buttons (26)
- 8 SCAN/SLOW buttons (36)
- 9 PAUSE button (26)
- 10 PLAY button (25)
The button has a tactile dot.*
- 11 buttons (28)
- 12 DISPLAY button (12)
- 13 TOP MENU button (28)
- 14 (on/standby) button (25)
- 15 VOL (volume) +/- buttons (52)
The + button has a tactile dot.*
- 16 TV/VIDEO button (52)
- 17 TIME/TEXT button (40)
- 18 PICTURE MODE button (47)
- 19 ANGLE button (46)
- 20 SUR (surround) button (44)
- 21 PICTURE NAVI (picture navigation) button (39)
- 22 REPEAT button (34)
- 23 INSTANT SEARCH/STEP button (26, 36)
- 24 INSTANT REPLAY/STEP button (26, 36)
- 25 STOP button (26)
- 26 ENTER button (26)
- 27 RETURN button (26)
- 28 MENU button (28, 29)

* Use the tactile dot as a reference when operating the player.


Guide to the Control Menu Display

Use the Control Menu to select a function and to view related information. Press DISPLAY to turn on.

Control Menu Display

The Control Menu display will show different items depending on the disc type. For details about each item, please refer to the pages in the parentheses.

Example: Control Menu display when playing a DVD.

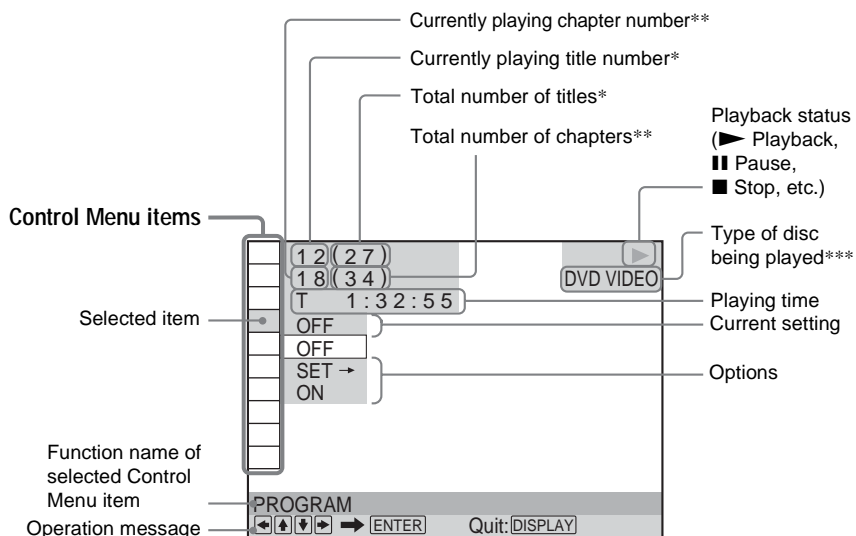

* Displays the scene number for VIDEO CDs (PBC is on), track number for VIDEO CDs/CDs, album number for DATA CDs.













** Displays the index number for VIDEO CDs/CDs, MP3 audio track number for DATA CDs.

*** Displays Super VCD as "SVCD."

To turn off the display



Press DISPLAY.

List of Control Menu Items

Item	Item Name, Function, Relevant Disc Type
	TITLE (page 37)/SCENE (page 37)/TRACK (page 37) Selects the title, scene, or track to be played. DVD VCD
	CHAPTER (page 37)/INDEX (page 37) Selects the chapter or index to be played. DVD VCD
	ALBUM (page 29) Selects the album to be played. DATA CD
	TRACK (page 37) Selects the track to be played. CD DATA CD
	TIME/TEXT (page 37) Checks the elapsed time and the remaining playback time. Input the time code for picture and music searching. Displays the DVD/CD text or the DATA CD's track name. DVD VCD CD DATA CD
	PROGRAM (page 31) Selects the title, chapter, or track to play in the order you want. DVD VCD CD
	SHUFFLE (page 33) Plays the title, chapter, or track in random order. DVD VCD CD
	REPEAT (page 34) Plays the entire disc (all titles/all tracks/all albums) repeatedly or one title/chapter/track/album repeatedly. DVD VCD CD DATA CD
	A-B REPEAT (page 34) Specifies the parts you want to play repeatedly. DVD VCD CD
	SHARPNESS (page 48) Exaggerates the outline of the image to produce a sharper picture. DVD VCD
	PARENTAL CONTROL (page 49) Set to prohibit playback on this player. DVD
	SETUP (page 53) QUICK Setup (page 23) Use Quick Setup to choose the desired language of the on-screen display, the aspect ratio of the TV and the audio output signal. CUSTOM Setup In addition to the Quick Setup setting, you can adjust other various settings. RESET Returns the settings in "SETUP" to the default setting. DVD VCD CD DATA CD

Hint

The Control Menu icon indicator lights up in green

 →  when you select any item except "OFF." ("PROGRAM," "SHUFFLE," "REPEAT," "A-B REPEAT," "SHARPNESS" only).

Hooking Up the Player

Follow Steps 1 to 6 to hook up and adjust the settings of the player.

Notes

- Plug cords securely to prevent unwanted noise.
- Refer to the instructions supplied with the components to be connected.
- You cannot connect this player to a TV that does not have a video input jack.
- Be sure to disconnect the power cord of each component before connecting.


Step 1: Unpacking

Check that you have the following items:

- Audio/video cord (pinplug \times 3 \longleftrightarrow pinplug \times 3) (1)
- Remote commander (remote) (1)
- Size AA (R6) batteries (2)

Step 2: Inserting Batteries into the Remote

You can control the player using the supplied remote. Insert two Size AA (R6) batteries by matching the \oplus and \ominus ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor **R** on the player.

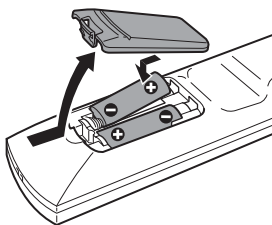


Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or a lighting apparatus. Doing so may cause a malfunction.
- If you do not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Step 3: Connecting the Video Cords

Connect this player to your TV monitor, projector, or AV amplifier (receiver) using a video cord. Select one of the patterns **A** through **C**. In order to view progressive signal (480p) pictures with a compatible TV, projector, or monitor, you must use connection **C**, according to the input jack on your TV monitor, projector, or AV amplifier (receiver).

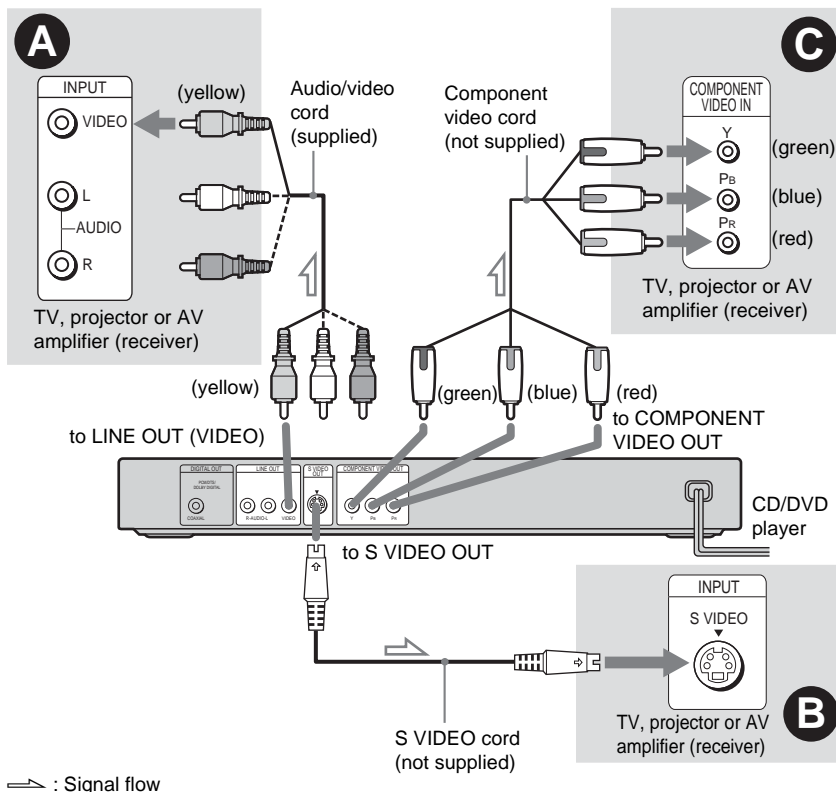

→ : Signal flow

A If you are connecting to a video input jack

Connect the yellow plug of the audio/video cord (supplied) to the yellow (video) jack. You will enjoy standard quality images.

Do not press the PROGRESSIVE button on the front panel if you have connected the TV to this jack (page 17).



Use the red and white plugs to connect to the audio input jacks (page 19). (Do this if you are connecting to a TV only.)

B If you are connecting to an S VIDEO input jack

Connect an S VIDEO cord (not supplied). You will enjoy high quality images.

Do not press the PROGRESSIVE button on the front panel if you have connected the TV to this jack (page 17).



C If you are connecting to a monitor, projector, or AV amplifier (receiver) having component video input jacks (Y, P_B, P_R)

Connect the component via the COMPONENT VIDEO OUT jacks using a component video cord (not supplied) or three video cords (not supplied) of the same kind and length. You will enjoy accurate color reproduction and high quality images. If your TV accepts progressive (480p) format signals, you must use this connection and then press PROGRESSIVE on the front panel to accept progressive video signals. The PROGRESSIVE indicator lights up when the player outputs progressive signals. See “Using the PROGRESSIVE button” on the next page for more information.




When connecting to a wide screen TV

Depending on the disc, the image may not fit your TV screen. If you want to change the aspect ratio, please refer to page 55.

Notes

- Connect the player directly to the TV. If you pass the player signals via the VCR, etc., you may not receive a clear image on the TV screen.

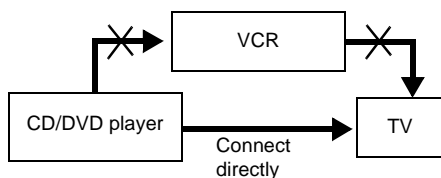

- Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In the case of 480 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 480p DVD player, please contact our customer service center.


Using the PROGRESSIVE button

You can fine-tune the Progressive 480p video signal output when you press PROGRESSIVE on the front panel (the PROGRESSIVE indicator lights up) and connect the player using the COMPONENT VIDEO OUT jacks to a TV that is able to accept the video signal in progressive format.

Only press the PROGRESSIVE button if you have connected a progressive signal compatible TV to the COMPONENT VIDEO OUT jacks using a component video cord (not supplied).

Using the LINE OUT (VIDEO) jack or the S VIDEO OUT jack will cause the TV picture to become unclear or go blank when you press the PROGRESSIVE button. In this case, press the PROGRESSIVE button so that the PROGRESSIVE indicator turns off.

Press PROGRESSIVE repeatedly to turn the displays as follows:

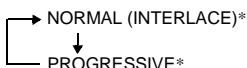

* Appears as NORMAL or PROGRESSIVE on the front panel display

- **NORMAL (INTERLACE)**

Select this when you are connected to a standard (Interlace format) TV.

- **PROGRESSIVE**

Select this when you are connected to a progressive TV.

Note





If you connect the player to a standard (interlace format) TV and press the PROGRESSIVE button (PROGRESSIVE indicator lights up), the TV picture will be unclear or go blank.

Step 4: Connecting the Audio Cords

Refer to the chart below to select the connection that best suits your system. Be sure to also read the instructions for the components you wish to connect.

Select a connection

Select one of the following connections, **A** through **D**.

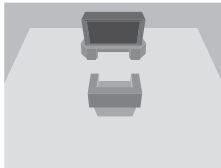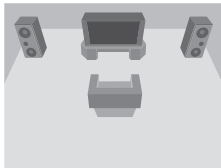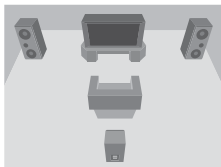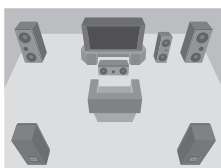Components to be connected	Connection	Your setup (example)
<u>TV</u>	A (page 19)	
<u>Stereo amplifier (receiver) and two speakers</u> or <u>MD deck/DAT deck</u>	B (page 20)	
<u>AV amplifier (receiver) having a Dolby* Surround (Pro Logic) decoder and 3 to 6 speakers</u>	C (page 21)	
<u>AV amplifier (receiver) with digital input jacks having a Dolby Digital or DTS** decoder and 6 speakers</u>	D (page 22)	

Hint


If you connect an AV amplifier (receiver) that conforms to the 96 kHz sampling frequency, use connection **D**.

* Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic," and the double-D symbol are trademarks of Dolby Laboratories.

** "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

A Connecting to your TV

This connection will use your TV's speakers for sound.

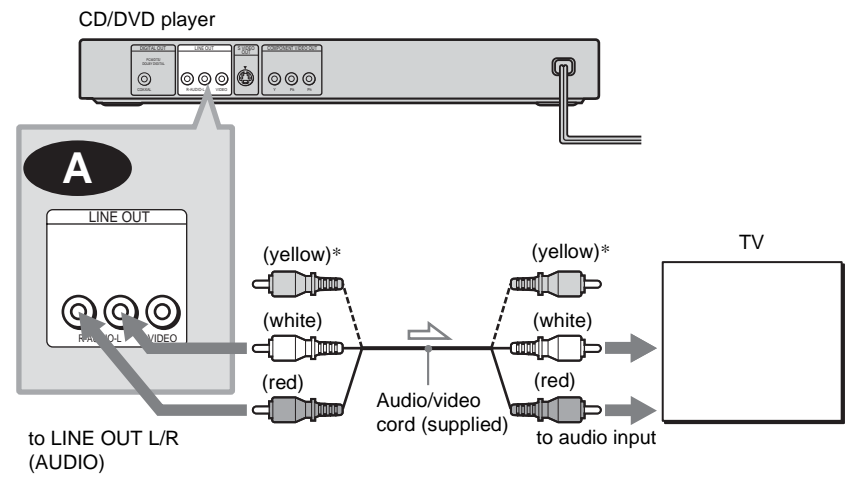

— : Signal flow


* The yellow plug is used for video signals (page 15).

💡 Hint

When connecting to a monaural TV, use a stereo-mono conversion cord (not supplied). Connect the LINE OUT L/R (AUDIO) jacks to the TV's audio input jack.

B Connecting to a stereo amplifier (receiver) and 2 speakers/Connecting to an MD deck or DAT deck

If the stereo amplifier (receiver) has audio input jacks L and R only, use **B-1**. If the amplifier (receiver) has a digital input jack, or when connecting to an MD deck or DAT deck, use **B-2**. In this case, you can also connect the player directly to the MD deck or DAT deck without using your stereo amplifier (receiver).

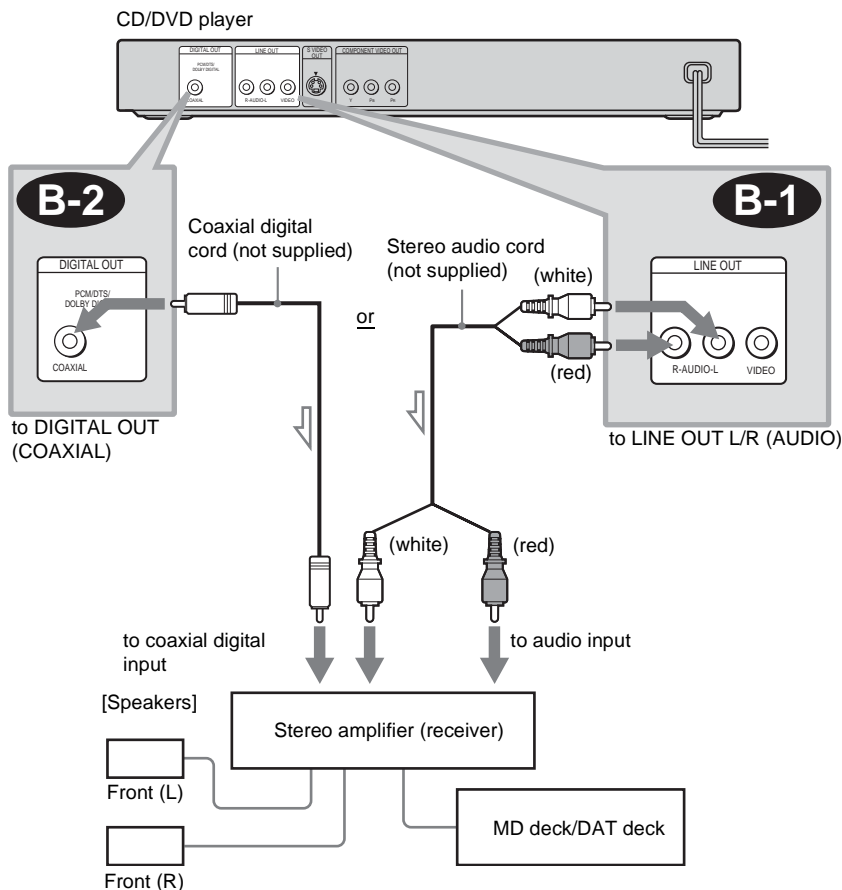


⇒: Signal flow

C Connecting to an AV amplifier (receiver) having a Dolby Surround (Pro Logic) decoder and 3 to 6 speakers

You can enjoy the Dolby Surround effects only when playing Dolby Surround audio or multi-channel audio (Dolby Digital) discs.

If your amplifier (receiver) has L and R audio input jacks only, use **C-1**. If your amplifier (receiver) has a digital input jack, use **C-2**.

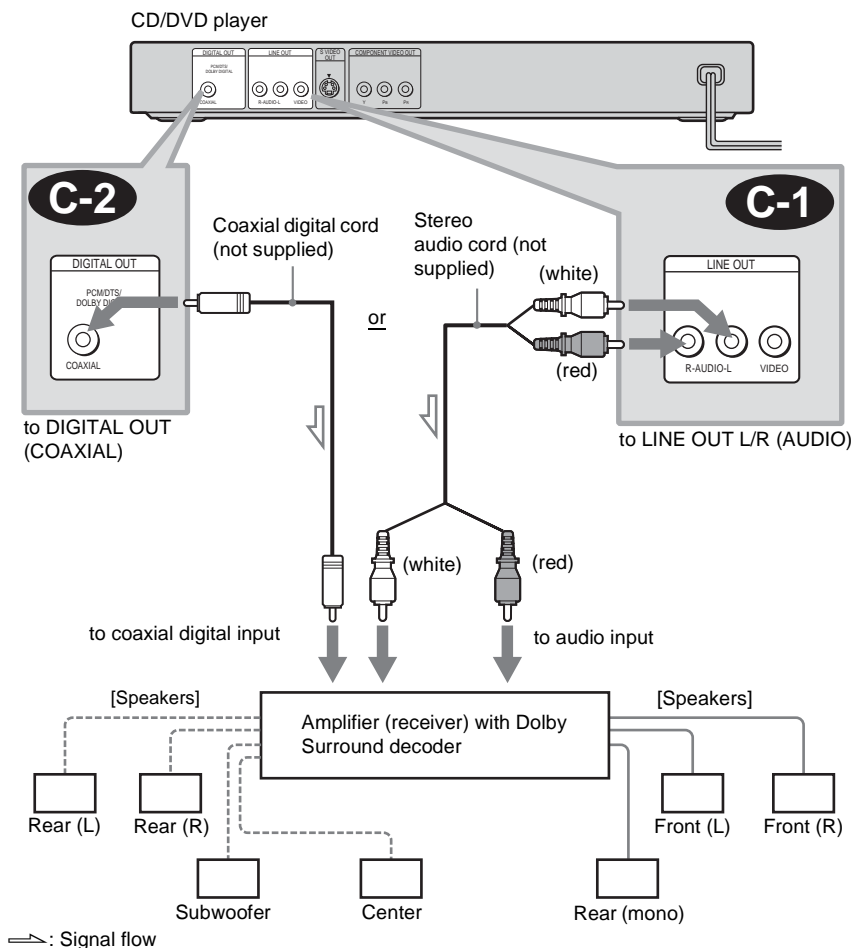


Note

When connecting 6 speakers, replace the monaural rear speaker with a center speaker, 2 rear speakers and a subwoofer.

D Connecting to an AV amplifier (receiver) with a digital input jack having a Dolby Digital or DTS decoder and 6 speakers

This connection will allow you to use the Dolby Digital or DTS decoder function of your AV amplifier (receiver).

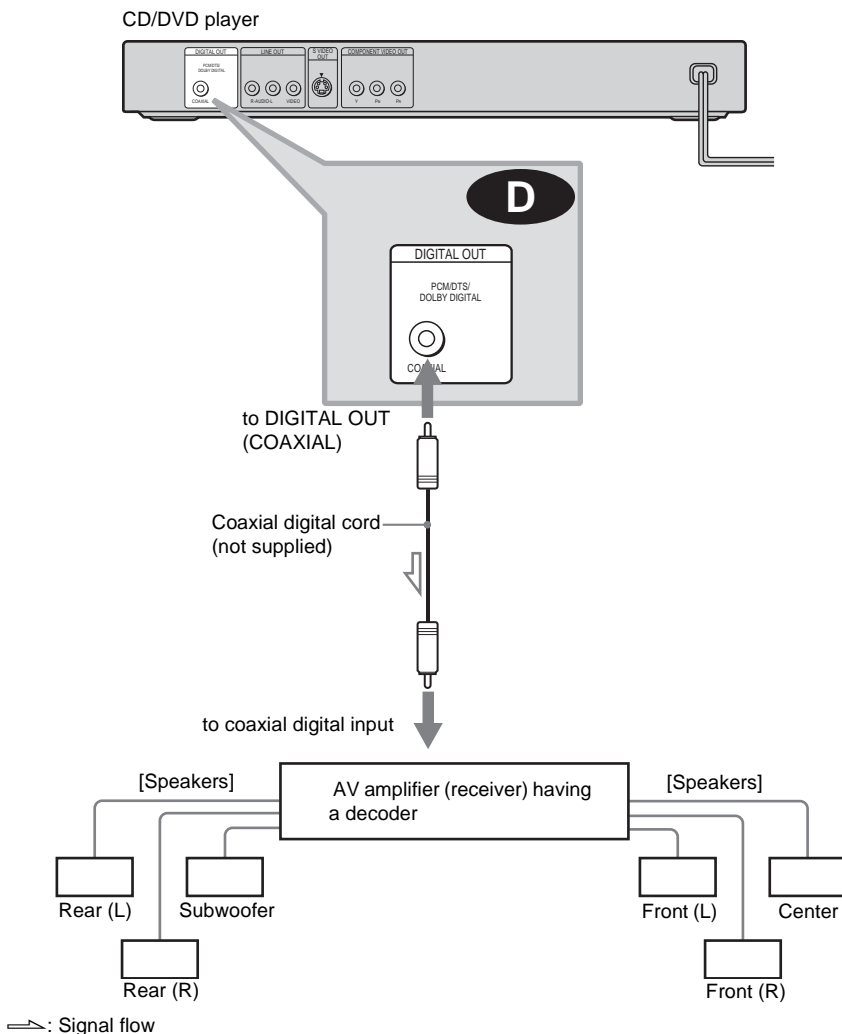

Hint

Use connection **D** when connecting to 7 or more speakers (6.1 ch or more).

Notes

- After you have completed the connection, be sure to set "DOLBY DIGITAL" to "DOLBY DIGITAL" and "DTS" to "ON" in Quick Setup (page 23).


- In order to listen to DTS sound tracks, you must use this connection. DTS sound tracks are not output through the LINE OUT L/R (AUDIO) jacks, even if you set "DTS" to "ON" in Quick Setup (page 23).
- When you connect an amplifier (receiver) that conforms to the 96 kHz sampling frequency, set "48kHz/96kHz PCM" in "AUDIO SETUP" to "96kHz/24bit" (page 58).

Step 5: Connecting the Power Cord

Plug the player and TV power cords into an AC outlet.

Step 6: Quick Setup

Follow the steps below to make the minimum number of basic adjustments for using the player. To skip an adjustment, press ►►. To return to the previous adjustment, press ◀◀.

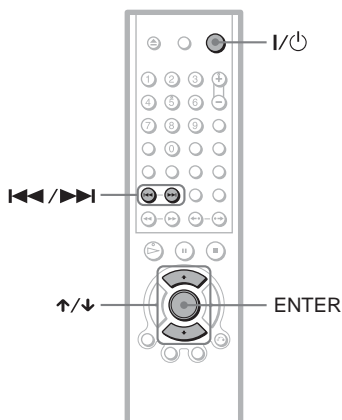

1 Turn on the TV.


2 Press I/⏻.

3 Switch the input selector on your TV so that the signal from the player appears on the TV screen.

“Press [ENTER] to run QUICK SETUP” appears at the bottom of the screen. If this message does not appear, select “QUICK” under “SETUP” in the Control Menu to run Quick Setup (page 54).

4 Press ENTER without inserting a disc.

The Setup Display for selecting the language used in the on-screen display appears.

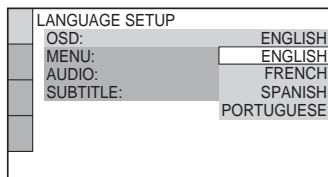


5 Press ↑/↓ to select a language.

The player uses the language selected here to display the menu and subtitles as well.

6 Press ENTER.

The Setup Display for selecting the aspect ratio of the TV to be connected appears.

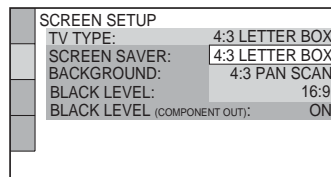

7 Press ↑/↓ to select the setting that matches your TV type.

◆ If you have a 4:3 standard TV


- 4:3 LETTER BOX or 4:3 PAN SCAN (page 55)

◆ If you have a wide-screen TV or a 4:3 standard TV with a wide-screen mode

- 16:9 (page 55)

8 Press ENTER.

The Setup Display for selecting the type of jack used to connect your amplifier (receiver) appears.

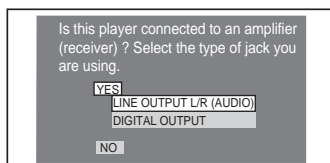

- 9** Press **↑/↓** to select the type of jack (if any) you are using to connect to an amplifier (receiver), then press **ENTER**.

Choose the item that matches the audio connection you selected on pages 19 to 22 (**A** through **D**).

- A**
- If you connect just a TV and nothing else, select “NO.” Quick Setup is finished and connections are complete.

B-1 C-1


- Select “LINE OUTPUT L/R (AUDIO).” Quick Setup is finished and connections are complete.

B-2 C-2 D

- Select “DIGITAL OUTPUT.” The Setup Display for “DOLBY DIGITAL” appears.

- 10** Press **↑/↓** to select the type of Dolby Digital signal you wish to send to your amplifier (receiver).

Choose the signal that matches the audio connection you selected on pages 20 to 22 (**B** through **D**).

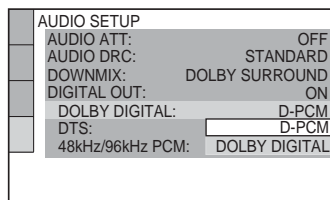

B-2 C-2


- D-PCM (page 58)

D

- DOLBY DIGITAL (only if the amplifier (receiver) has a Dolby Digital decoder) (page 58)

- 11** Press **ENTER**.

“DTS” is selected.

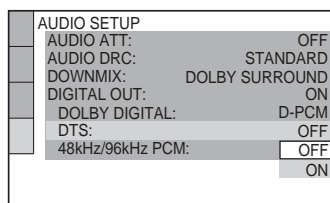

- 12** Press **↑/↓** to select whether or not you wish to send a DTS signal to your amplifier (receiver).

Choose the item that matches the audio connection you selected on pages 20 to 22 (**B** through **D**).

B-2 C-2

- OFF (page 58)

D

- ON (only if the amplifier (receiver) has a DTS decoder) (page 58)

- 13** Press **ENTER**.

Quick Setup is finished. All connections and setup operations are complete.

Enjoying the surround sound effects

To enjoy the surround sound effects of this player or your amplifier (receiver), set the following items as described below for the audio connection you selected on pages 20 to 22 (**B** through **D**). Each of these is the default setting and does not need to be adjusted when you first connect the player. Refer to page 53 for using the Setup Display.

Audio Connection (pages 19 to 22)

A

- No additional settings are needed.

B-1 C-1

- Set “DOWNMIX” to “DOLBY SURROUND” (page 58)
- If the sound distorts even when the volume is turned down, set “AUDIO ATT” to “ON” (page 57)

B-2 C-2 D




- Set “DOWNMIX” to “DOLBY SURROUND” (page 58)
- Set “DIGITAL OUT” to “ON” (page 58)

Playing Discs

Playing Discs DVD VCD CD

DATA CD

Depending on the DVD or VIDEO CD, some operations may be different or restricted. Refer to the operating instructions supplied with your disc.

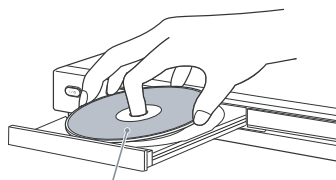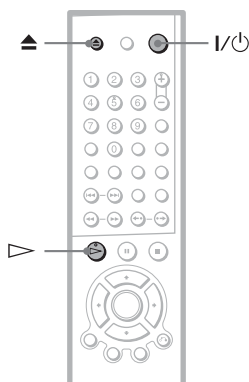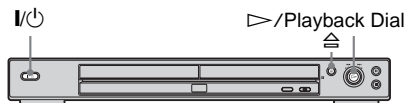

With the playback side facing down

5 Press ▶.

The disc tray closes, and the player starts playback (continuous play). Adjust the volume on the TV or the amplifier (receiver).

Depending on the disc, a menu may appear on the TV screen. For DVDs, see page 28. For VIDEO CDs, see page 28.

To turn off the player

Press I/O. The player enters standby mode.

Hint

You can have the player turn off automatically whenever you leave it in stop mode for more than 30 minutes. To turn on this function, set "AUTO POWER OFF" in "CUSTOM SETUP" to "ON" (page 56).

1 Turn on your TV.


2 Press I/O.

The player turns on.


3 Switch the input selector on your TV so that the signal from the player appears on the TV screen.

◆ When using an amplifier (receiver)

Turn on the amplifier (receiver) and select the appropriate channel so that you can hear sound from the player.

4 Press  on the player, and place a disc on the disc tray.

Additional operations

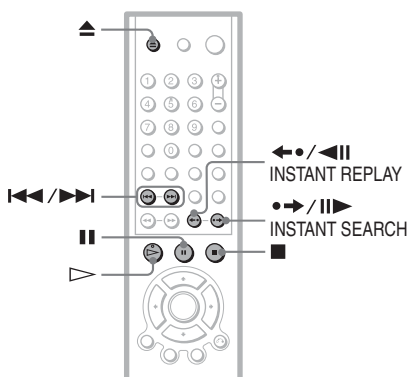

To	Operation
Stop	Press ■
Pause	Press II
Resume play after pause	Press II or ▷
Go to the next chapter, track, or scene in continuous play mode	Press ►► on the remote, or briefly turn the ▷/Playback Dial* on the player counterclockwise
Go back to the previous chapter, track, or scene in continuous play mode	Press ◀◀ on the remote, or briefly turn the ▷/Playback Dial* on the player counterclockwise
Stop play and remove the disc	Press ▲
Replay the previous scene**	Press ◀•/◀II INSTANT REPLAY during playback
Briefly fast forward the current scene***	Press •►/II► INSTANT SEARCH during playback

* For more details about the ▷/Playback Dial, see page 36.
** For DVD VIDEOS and the DVD-RWs/DVD-Rs only
***For DVD VIDEOS and the DVD-RWs/DVD-Rs or DVD+RWs only

Hints


- The Instant Replay function is useful when you want to review a scene or dialog that you missed.
- The Instant Search function is useful when you want to pass over a scene that you don't want to watch.

Note

You may not be able to use the Instant Replay or Instant Search function with some scenes.

Locking the disc tray (Child Lock)

You can lock the disc tray to prevent children from opening it.

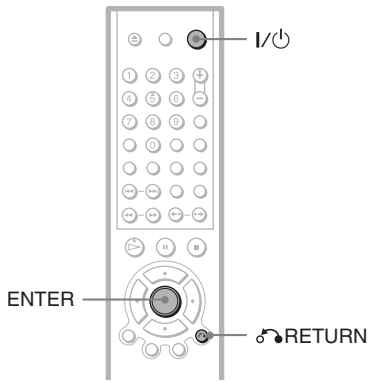

When the player is in standby mode, press ◀ RETURN, ENTER, and then I/O on the remote.

The player turns on and “LOCKED” appears on the front panel display. The ▲ button on the player or the remote does not work while the Child Lock is set.


To unlock the disc tray

When the player is in standby mode, press ◀ RETURN, ENTER, and then I/O again.

Resuming Playback from the Point Where You Stopped the Disc

(Multi-disc Resume) **DVD** **VCD**

The player stores the point where you stopped the disc for up to 6 discs and resumes playback the next time you insert the same disc. When you store a resume playback point for the seventh disc, the resume playback point for the first disc is deleted.

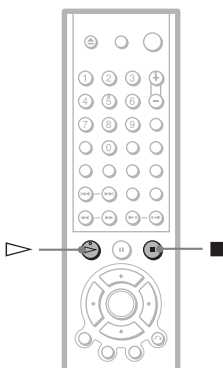

1 While playing a disc, press ■ to stop playback.

“RESUME” appears on the front panel display.

2 Press ▷.

The player starts playback from the point where you stopped the disc in Step 1.

Notes

- “MULTI-DISC RESUME” in “CUSTOM SETUP” must be set to “ON” (default) for this function to work (page 57).
- The resume playback point for the current disc is cleared when:
 - you change the play mode.
 - you change the settings on the Setup Display.
- This function may not work with some discs.
- Resume Play does not work during Shuffle Play and Program Play.
- If “MULTI-DISC RESUME” in “CUSTOM SETUP” is set to “ON” and you playback a recorded disc such as DVD-RW, the player may playback other recorded discs from the same resume point. To play from the beginning, press ■ twice and then press ▷.

💡 Hints


- To play from the beginning of the disc, press ■ twice, then press ▷.
- For CDs and DATA CDs, the player remembers the resume playback point for the current disc unless the disc tray is opened, the power cord is disconnected, or only for DATA CDs, the player enters standby mode.

Using the DVD's Menu **DVD**

A DVD is divided into long sections of a picture or a music feature called "titles."

When you play a DVD which contains several titles, you can select the title you want using the TOP MENU button.

When you play DVDs that allow you to select items such as the language for the subtitles and the language for the sound, select these items using the MENU button.

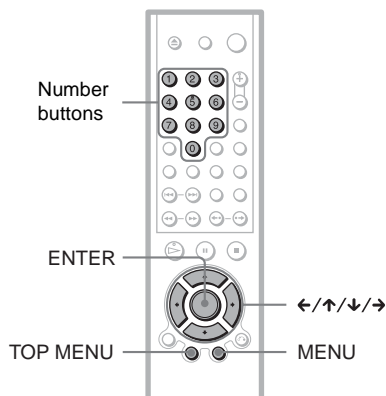

1 Press TOP MENU or MENU.


The disc's menu appears on the TV screen.

The contents of the menu vary from disc to disc.

2 Press ←/↑/↓/→ or the number buttons to select the item you want to play or change.

If you press the number buttons, the following display appears.

Press the number buttons to select the item you want.

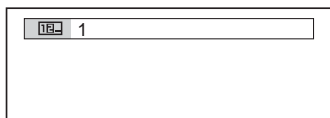


3 Press ENTER.

Playing VIDEO CDs with PBC Functions (PBC Playback)

VCD

PBC (Playback Control) allows you to play VIDEO CDs interactively by following the menu on the TV screen.

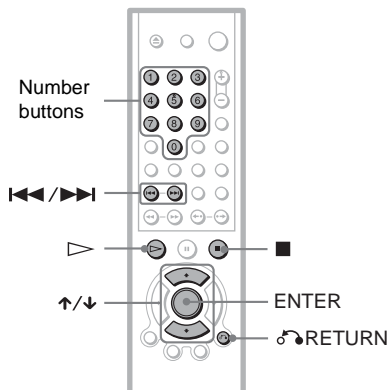

1 Start playing a VIDEO CD with PBC functions.

The menu for your selection appears.

2 Select the item number you want by pressing the number buttons.

3 Press ENTER.

4 Follow the instructions in the menu for interactive operations.

Refer to the instructions supplied with the disc, as the operating procedure may differ depending on the VIDEO CD.

To return to the menu

Press ↵ RETURN.

Hint

To play without using PBC, press **◀◀/▶▶** or the number buttons while the player is stopped to select a track, then press **▷** or ENTER.

“Play without PBC” appears on the TV screen and the player starts continuous play. You cannot play still pictures such as a menu.


To return to PBC playback, press **■** twice then press **▷**.

Note

Depending on the VIDEO CD, “Press ENTER” in Step 3 may appear as “Press SELECT” in the instructions supplied with the disc. In this case, press **▷**.

Playing an MP3 Audio Track **DATA CD**

You can play DATA CDs (CD-ROMs/CD-Rs/CD-RWs) recorded in MP3 (MPEG1 Audio Layer 3) format.

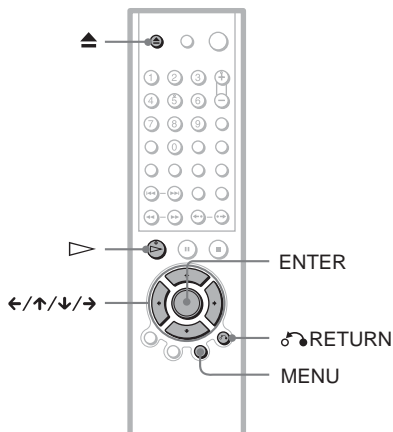

1 Press **▲** and place a DATA CD on the disc tray.


2 Press **▷**.


The disc tray closes, and the player starts to play the first MP3 audio track in the first album on the disc.

Selecting an album and track

1 Press MENU.

The list of MP3 albums recorded on the DATA CD appears.

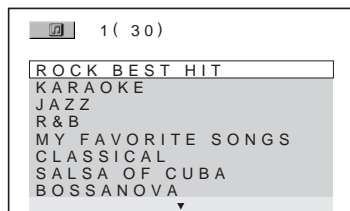

When you insert a DATA CD and press , the numbered tracks are played sequentially, from ① through ⑦. Any sub-albums/tracks contained within a currently selected album take priority over the next album in the same tree. (Example: **C** contains **D** so ④ is played before ⑤.)

When you press MENU and the list of MP3 albums appears (page 29), the albums are arranged in the following order: **A** → **B** → **C** → **D** → **F** → **G**. Albums that do not contain tracks (such as album **E**) do not appear in the list.

Hints

- If you add numbers (01, 02, 03, etc.) to the front of the track file names, the tracks will be played in that order.
- Since a disc with many trees takes longer to start playback, it is recommended that you create albums of no more than two trees.

Notes

- Depending on the software you use to create the DATA CD, the playback order may differ from the illustration above.
- The playback order above may not be applicable if there are more than a total of 200 albums and tracks in the DATA CD.
- The player can recognize up to 100 albums (the player will count just albums, including albums that do not contain MP3 audio tracks). The player will not play any albums beyond the first 100 albums. Of the first 100 albums, the player will play no more than a combined total of 200 albums and tracks.

 
Various Play Mode Functions (Program Play, Shuffle Play, Repeat Play, A-B Repeat Play)

You can set the following play modes:

- Program Play (page 31)
- Shuffle Play (page 33)
- Repeat Play (page 34)
- A-B Repeat Play (page 34)


Note



The play mode is canceled when:


- you open the disc tray.
- the player enters standby mode by pressing .

Creating your own program (Program Play) **DVD** **VCD** **CD**

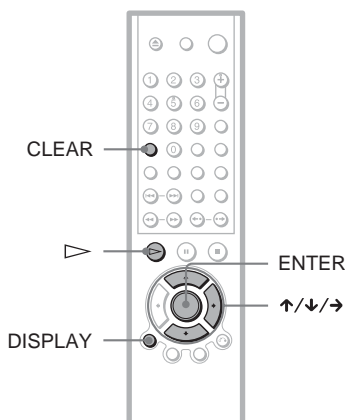You can play the contents of a disc in the order you want by arranging the order of the titles, chapters, or tracks on the disc to create your own program. You can program up to 99 titles, chapters, and tracks.




- 1 Press **DISPLAY**.
The Control Menu appears.
- 2 Press  to select  (PROGRAM), then press **ENTER**.
The options for "PROGRAM" appear.

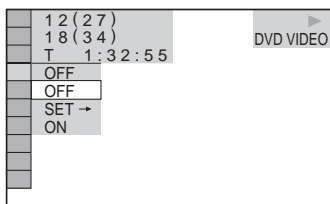


- 3** Press \uparrow/\downarrow to select “SET \rightarrow ,” then press ENTER.

“TRACK” is displayed when you play a VIDEO CD or CD.

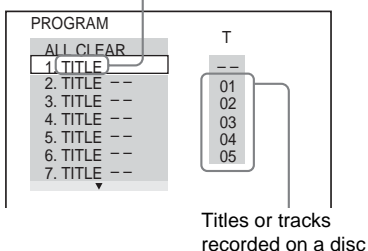

- 4** Press \rightarrow .
The cursor moves to the title or track row “T” (in this case, “01”).

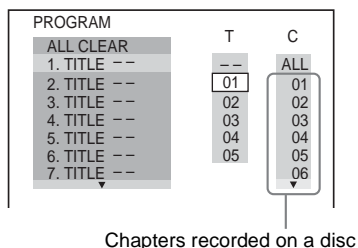


- 5** Select the title, chapter, or track you want to program.


◆ When playing a DVD

For example, select chapter “03” of title “02.”

Press \uparrow/\downarrow to select “02” under “T,” then press ENTER.

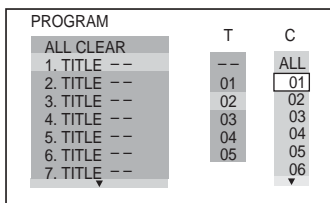

Next, press \uparrow/\downarrow to select “03” under “C,” then press ENTER.

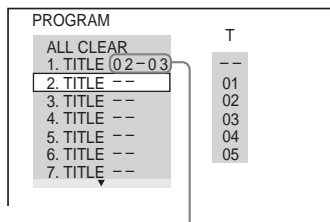


Selected title and chapter

◆ When playing a VIDEO CD or CD

For example, select track “02.”

Press \uparrow/\downarrow to select “02” under “T,” then press ENTER.

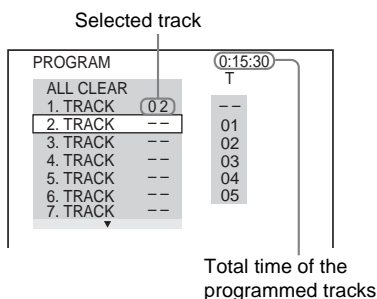

- 6** To program other titles, chapters, or tracks, repeat Steps 4 to 5.
The programmed titles, chapters, and tracks are displayed in the selected order.
- 7** Press \triangleright to start Program Play.
Program Play begins.
When the program ends, you can restart the same program again by pressing \triangleright .

To return to normal play

Press CLEAR, or select “OFF” in Step 3. To play the same program again, select “ON” in Step 3 and press ENTER.

To change or cancel a program

- Follow Steps 1 through 3 of “Creating your own program (Program Play).”
- Select the program number of the title, chapter, or track you want to change or cancel using \uparrow/\downarrow , and press \rightarrow .
- Follow Step 5 for new programming. To cancel a program, select “--” under “T,” then press ENTER.

To cancel all of the titles, chapters, or tracks in the programmed order

- 1 Follow Steps 1 through 3 of “Creating your own program (Program Play).”
- 2 Press **↑** and select “ALL CLEAR.”
- 3 Press **ENTER**.

Hint


You can do Repeat Play or Shuffle Play of the programmed titles, chapters, or tracks. During Program Play, follow the Steps of “Repeat Play” (page 34) or “Shuffle Play” (page 33).


Note


You cannot use this function with VIDEO CDs and Super VCD with PBC playback.

Playing in random order (Shuffle Play) **DVD** **VCD** **CD**

You can have the player “shuffle” titles, chapters, or tracks. Subsequent “shuffling” may produce a different playing order.

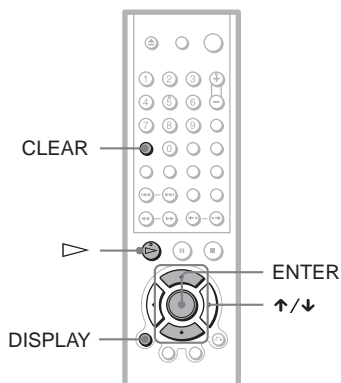

- 1 Press **DISPLAY** during playback.
The Control Menu appears.
- 2 Press **↑/↓** to select  (SHUFFLE), then press **ENTER**.
The options for “SHUFFLE” appear.

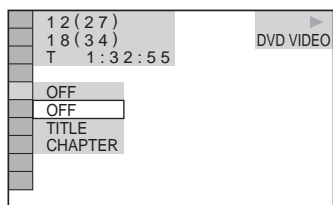

- 3 Press **↑/↓** to select the item to be shuffled.

◆ When playing a DVD

- TITLE
- CHAPTER

◆ When playing a VIDEO CD or CD

- TRACK

◆ When Program Play is activated

- ON: shuffles titles, chapters, or tracks selected in Program Play.

- 4 Press **ENTER**.

Shuffle Play starts.

To return to normal play

Press **CLEAR**, or select “OFF” in Step 3.

Hints

- You can set Shuffle Play while the player is stopped. After selecting the “SHUFFLE” option, press **▷**. Shuffle Play starts.
- Up to 200 chapters in a disc can be played in random order when “CHAPTER” is selected.

Note


You cannot use this function with VIDEO CDs and Super VCD with PBC playback.

Playing repeatedly (Repeat Play)


DVD VCD CD DATA CD

You can play all of the titles or tracks on a disc or a single title, chapter, or track repeatedly.

You can use a combination of Shuffle or Program Play modes.

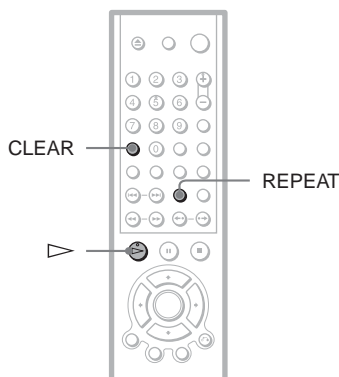

- 1 Press REPEAT during playback.
The following display appears.

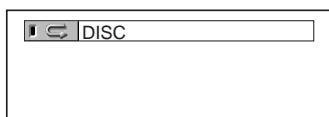

- 2 Press REPEAT repeatedly to select the item to be repeated.

◆ When playing a DVD

- DISC: repeats all of the titles.
- TITLE: repeats the current title on a disc.
- CHAPTER: repeats the current chapter.

◆ When playing a VIDEO CD or CD

- DISC: repeats all of the tracks.
- TRACK: repeats the current track.

◆ When playing a DATA CD (MP3 audio)

- DISC: repeats all of the albums.
- ALBUM: repeats the current album.
- TRACK: repeats the current track.

◆ When Program Play or Shuffle Play is activated

- ON: repeats Program Play or Shuffle Play.

To return to normal play

Press CLEAR, or select "OFF" in Step 2.

💡 Hints


- You can set Repeat Play while the player is stopped. After selecting the "REPEAT" option, press \triangleright . Repeat Play starts.
- You can also select "REPEAT" from the Control Menu (page 12).

Note

You cannot use this function with VIDEO CDs and Super VCD with PBC playback.

Repeating a specific portion (A-B Repeat Play) **DVD VCD CD**

You can play a specific portion of a title, chapter or track repeatedly. (This function is useful when you want to memorize lyrics, etc.)

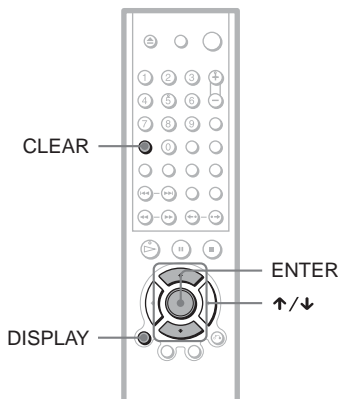

- 1 Press DISPLAY during playback.
The Control Menu appears.

- 2 Press \uparrow/\downarrow to select \square (A-B REPEAT), then press ENTER.
The options for "A-B REPEAT" appear.

